

FLEXIBLE SKIRTING


Technical data sheet
English

QUICK·STEP®
FLOOR DESIGNERS

General information

Flexible, paintable skirting that can be cut to your desired length. Ideal to finish pillars or curved walls. Use the Foamstrip (NEFOAMSTRIP20) and Hydrokit (QSKITTRANSP) for a watertight finish in damp rooms. Easy to install with contact glue. Not compatible with Quick-Step One4All Glue.

This shape is also available in a non-flexible version to nicely finish the other walls in your room with the same skirting style (QSPSKR4PAINT).

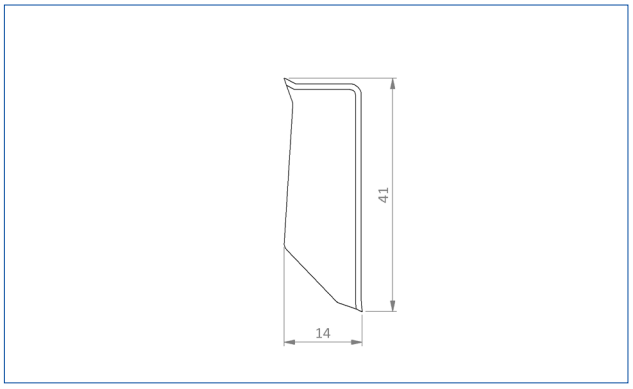

Contents	Composition	Colour
Flexible, paintable skirting (1 piece per pack)	Foamed PVC	White ≈ RAL 9003

Order code	Dimensions
QSFLEXSKR	7000 x 14 x 40 mm

Applicable for:

All Quick-Step Laminate, Vinyl and Parquet floors.

The floor must be able to expand and contract on all sides. This is why an expansion gap must be provided on all sides of the floor, around pipes, thresholds and under door frames. The exact expansion gap size depends on the floor type. Consult the installation instructions of your Quick-Step floor to know the required size of the expansion gap. To finish off this gap, we offer a wide range of skirting and profiles.

Features

Quick-Step accessories are specifically developed for Quick-Step floors.

Multi-purpose surface

The surface can be left white or painted.

Easy installation with contact glue

Simply glue the skirting to the wall.

Attention: this flexible skirting cannot be glued with the Quick-Step One4All Glue.

Water-resistant

Use the Foamstrip and Hydrokit for a watertight finish in damp rooms.

Installation

The skirting can be installed in the following way:

1. You can cut the flexible skirting with a cutter knife at the desired length.

2. Simply glue the skirting to the wall with a contact glue. Follow the instructions of the glue manufacturer. Make sure the surface is clean and free of dust before gluing. **Attention: this flexible skirting cannot be glued with the Quick-Step One4All glue.**

3. You can paint the skirting in the colour of your choice. Use a primer first (universal wall primer, no PVC primer!). Paint with acrylic wall paint or acrylic lacquer (no latex-based paint!).

Unilin bv division flooring
Ooigemstraat 3, B-8710 Wielsbeke
T: +32 56 67 52 11
unilin.com
quick-step.com

UNILIN | QUICK·STEP FLOOR DESIGNERS